

# Vacuum Packaging Machine LCD Version Instructions

## ● Vacuum time setting:

Welcome to use vacuum packaging machine.

Press SET button to display working status, press SET button again to display parameter setting:

1. Vacuum time (white cursor stops at vacuum time)
2. Sealing time
3. Cooling time

Press SET button again to display vacuum time setting, current setting value □□ (white cursor indicates that this parameter can be set), press ▼▲ key to add or subtract, set the data you want, and press the ENT key to confirm the save (Press the SET button is ok, but the system will not automatically save the data. After the power is turned off, the data you set can not be saved. We suggest to press the ENT key to save the data because the data you set is still there after restarting. This item is not repeated below).

## ● Sealing time setting:

After the vacuum time is set, press the ▼ key to return to the parameter setting:

1. Vacuum time
2. Sealing time (white cursor stops at the sealing time)
3. Cooling time

Press the SET button again to display Sealing time setting, current setting value □□ (white cursor indicates that this parameter can be set), press ▼▲ to increase or decrease, set the data you want, press ENT to save data.

## ● Cooling time setting:

After the sealing time is set, press the ▼ key to return to the parameter setting:

1. Vacuum time
2. Sealing time
3. Cooling time (white cursor stops at the cooling time)

Press the SET button again to display Cooling time setting, current setting value □□ (white cursor indicates that this parameter can be set), press ▼▲ to increase or

decrease, set the data you want, press ENT to save data.

- **System language selection:**

After the cooling time is set, press the ▼ key to return to the parameter setting:

2. Sealing time

3. Cooling time

4. System language (white cursor stops at the system language)

Press the SET button again to display 1.Chinese (white cursor stops in Chinese)

2.English (white cursor indicates that this parameter can be set), press ▼▲ to select,

set the data you want, press ENT to confirm the data.

- After all the parameters are set, press the SET button again to return to the working status interface. At this time, press the vacuum cover and the machine will work normally.